



# ATHALIUM

Elevating Spaces with Italian Precision



TERNI



SHUTTERS

# Shutter With Integrated Handle

Designed With A Built-In Handle For Seamless Function And Clean Aesthetics

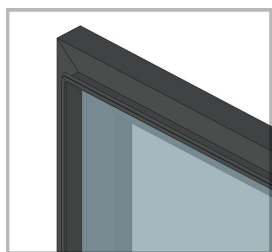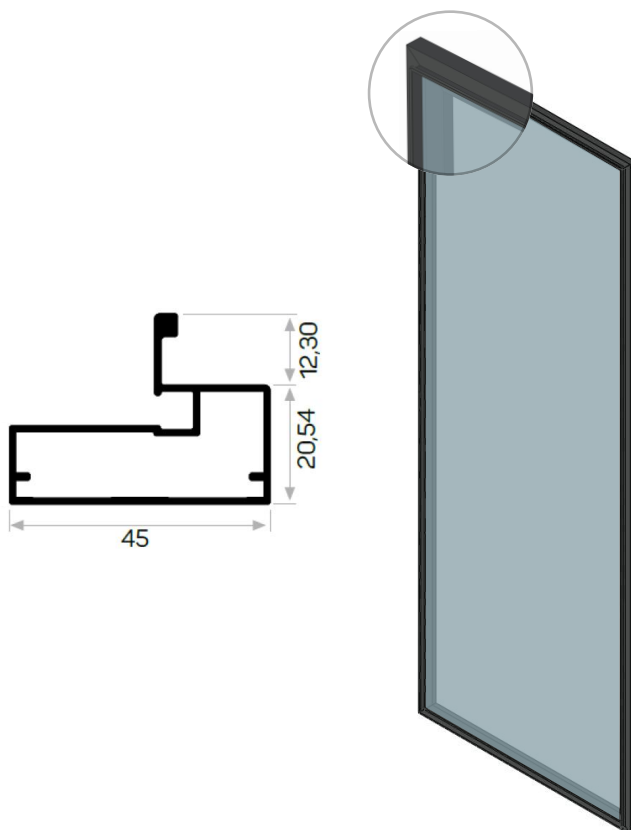

- This Profile Features A Thin Visible Face, Providing A Minimal Frame Around The Glass.

## Introduction

Premium **Aluminium Profile** For Glass Applications, Combining Strength, Sleek Design, And Functionality.

Each Shutter Available With **Built-In Handle**, Includes Integrated **Rubber** For Glass Protection, And Is Designed For **4 mm Glass**.

Available Only In Anthracite Finish.

## Colors:



Anthracite

# Glass Options

Discover The Different Glass Finishes To Match Your Style And Function.

Fumé

Bronze

Clear

White Mirror

Bronze Mirror

Black Mirror

Frosted

Back Painted Black

Back Painted White

Reflective Bronze

Reflective Black

Fluted

Ribbed  
Max. Height  
280 Cm

Ribbed Bronze  
Max. Height  
245 Cm

**Note:** The Profile Is Designed For 4 Mm Glass, With Colors Customizable Based On Your Need.


# Hinge Options

## Adjacent And Single Terni Shutters


- **Adjacent Terni Shutters**

Installed **Adjacent** To Each Other, A **165° Hinge** Must Be Used.

Plan

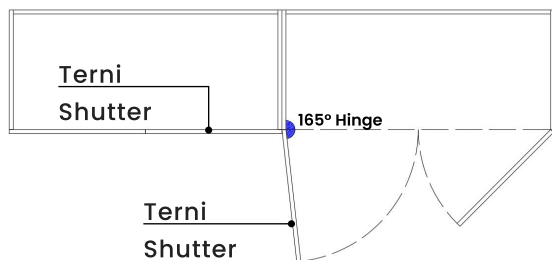


Elevation

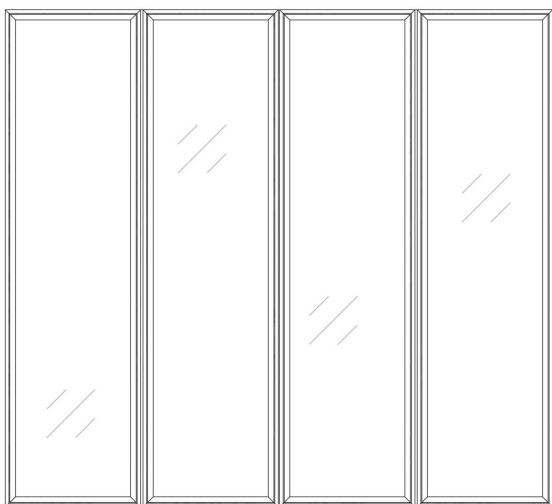


- **Single Terni Shutter**

When A **Terni Shutter** Is **Not Adjacent** To Another Terni Shutter, **All Hinge Options** Are Applicable.

Plan

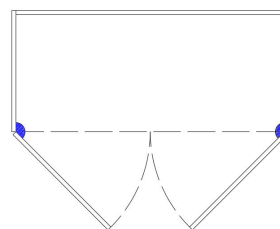


Elevation

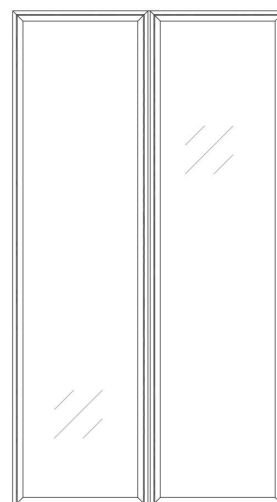


# Hinge Options


A Guide To Angles, Mechanisms, And Applications.

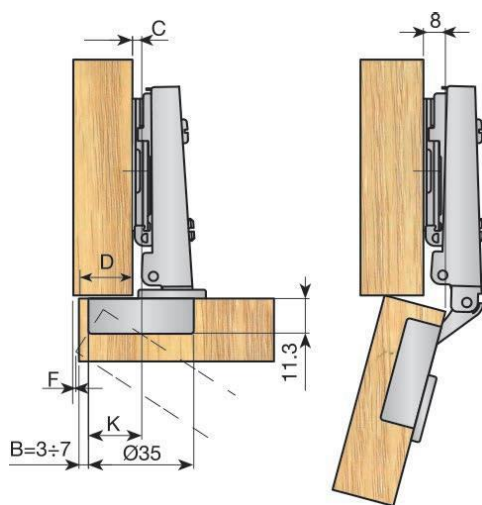


Full Overlay

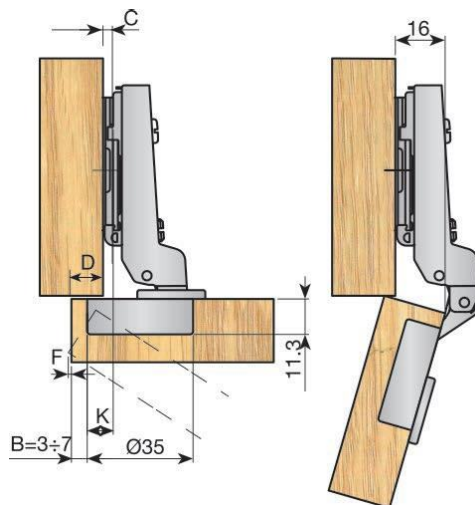


Half Overlay

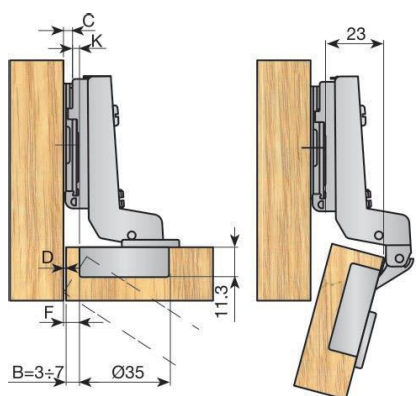

Full Inset

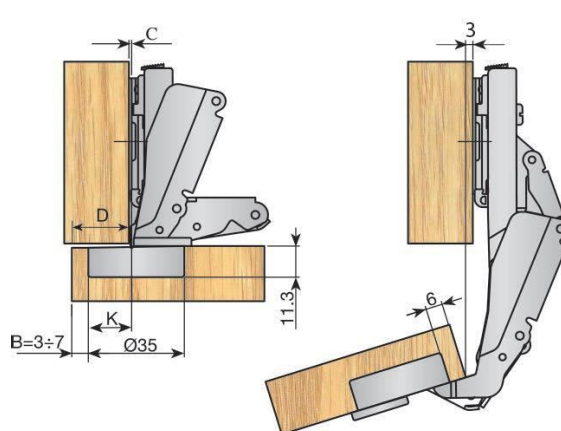


165°

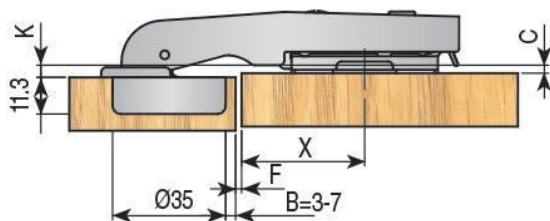

90° ÷ 200°

# Instruction

Follow These Steps To Ensure Accurate Drilling Positions.

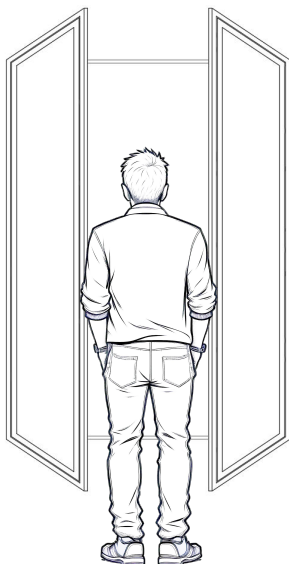


- When Opening The Aluminium Shutter , Pay Close Attention To The Shutter's Side.



Left Shutter

Right Shutter

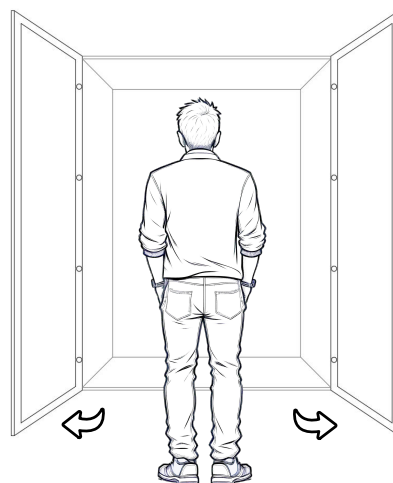


Right Edge

Left Edge

Left Shutter


Right Shutter

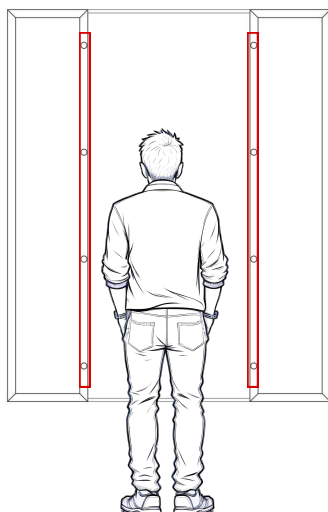

- right-side shutters have hinge holes on the left edge, and left-side shutters have hinge holes on the right edge when viewed from the back side.


# Instruction

Follow These Steps To Ensure Accurate Drilling Positions.

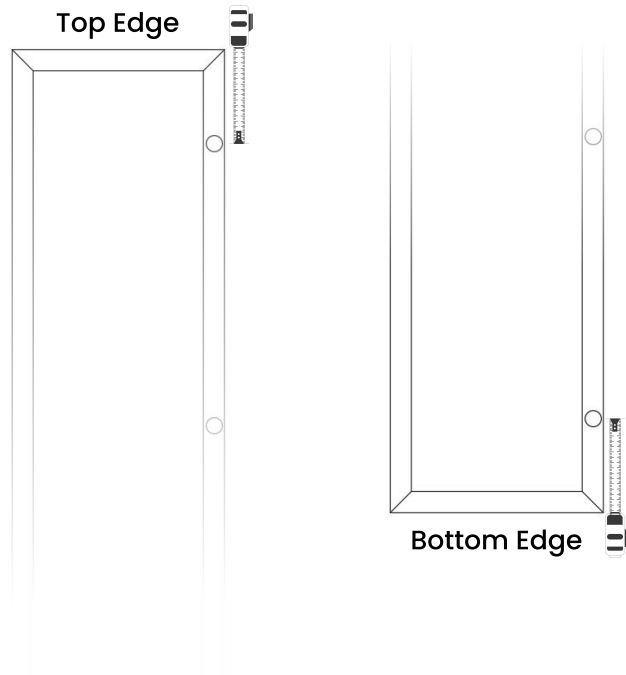


- Minimum Distance: 8 Cm From Top Edge To The Center Of The First Hole And From Bottom Edge To The Center Of The Last Hole.

- Hole Position Must Be Measured Relative To The Aluminium Frame Started From X= Minimum Size 3mm To 6mm.

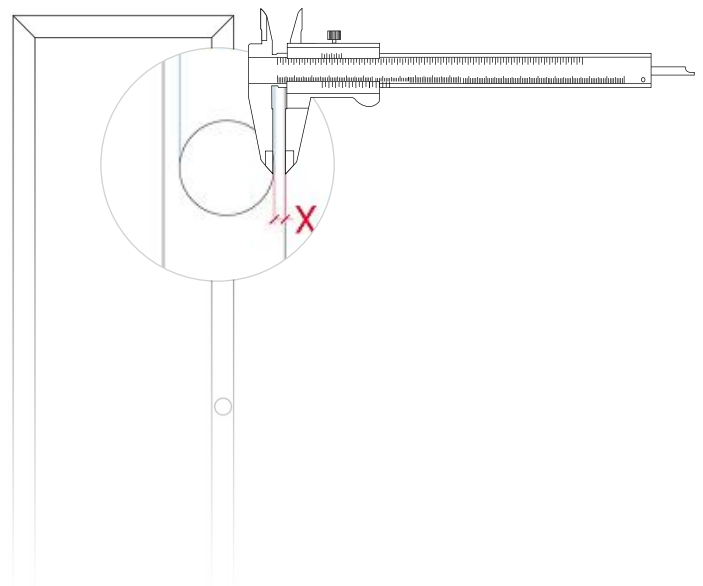


# Measurements Guide


Provide Your Measurements In Centimeters (Cm) According To The Graphic Below, Following The Distances Labeled With Letters (A, B, C...).

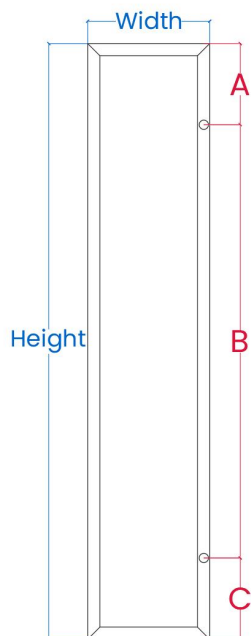


2 Hinges

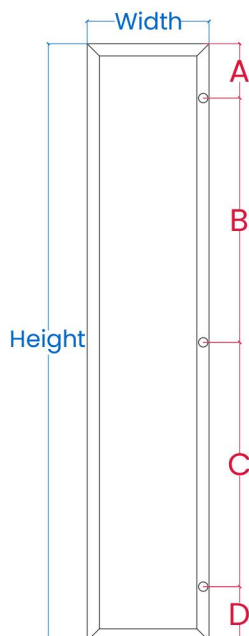


3 Hinges

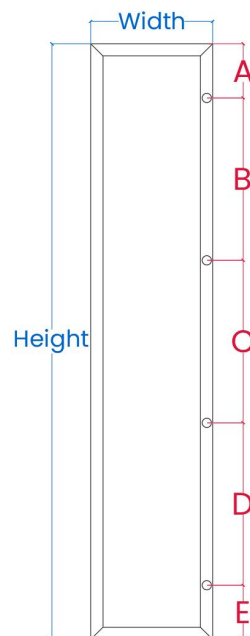


4 Hinges

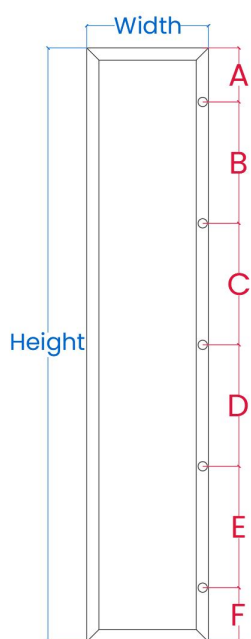

5 Hinges

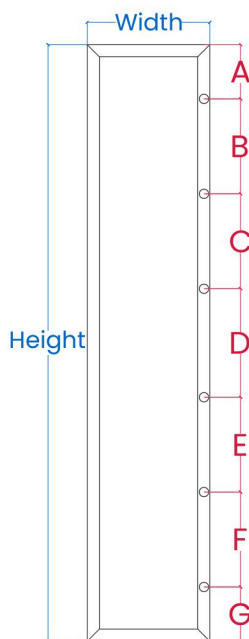

6 Hinges

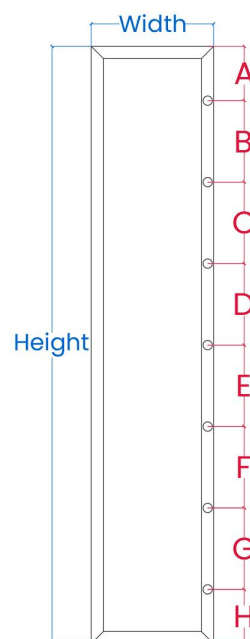

7 Hinges



# | Shutter

## **Nathalium .Co**

Jamal Abdul Nasser Str. - Al Bahsas - Tripoli, Lebanon

Tel: 06/411790 , 06/411 791 - cell: 71/847529

**[www.nathalium.com](http://www.nathalium.com) - [info@nathalium.com](mailto:info@nathalium.com)**



© NATHALIUM 2025. All right reserved